

# IMD Drive

## Update operating system ( OS )

### 1. Necessary equipment:

Computer with native serial Port or an USB to Serial adapter certified by Serad.  
Communication cable CIMDP.  
Corresponding iDPL software to OS version that you want.




**Update OS will erase all parameters and task saved in the drive. Consider to save parameters and project before continued.**

### 2. Update OS




- Connect the drive to the PC with the CIMDP cable.
- Launch the iDPL software with the **Start** menu.

- In the welcome window, select **Abort**
- Go to **Options \ Com PC** and check the good setting of serial communication port.
- Go to **Options \ Accessibility \ Advanced parameters**
- Go to **Options \ Load OS**

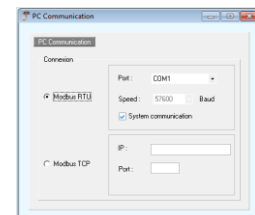

- In the pop-up windows click on **Oui**
- The loading process begins

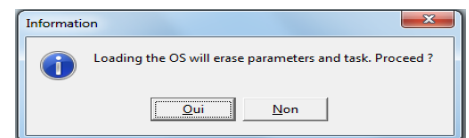

- At the completion of the loading, click on **OK**
- Click again on **OK**

